




# LED WORK LIGHT INSTALLATION INSTRUCTIONS

## Preliminary Steps

1. Read all instructions carefully and study diagrams before installing lights.
2. Check with state and local authorities for laws governing usage and proper mounting of auxiliary lamps.
3. Disconnect ground connection from battery (marked "-") to avoid accidental short circuits before attempting to connect electrical wires.
4. Route new wires along existing wiring. Tape as necessary to correct slack.
5. When running wires through the firewall, keep them away from moving parts.

## Mounting Lights

1. **13SL50412**: Drill 9mm holes for screw placement on the surface where you would like to fix the light.
2. **13SL50432/13SL50452**: Drill 11mm holes for screw placement on the surface where you would like to fix the light.
3. Use the bolt to fasten the lamp, add the locking washer and tighten the bolt.
4. Wiring: Black "-", Red "+".  
White "+" (Color temperature adjustment signal wire).
5. Color temperature adjustment function:
  - 1). Connect the positive and negative wire of the product to the power supply. Touch the white wire to "+" of the power supply, the color temperature will be switched to a different color temperature (3000K/4500K/6000K) for each touch.
  - 2). The white wire contacts the positive electrode for more than 3 seconds, and the color temperature returns to the initial color temperature of 6000K.

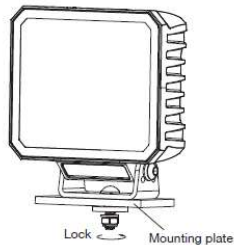

## Warning:

1. Work under the specified voltage (DC9-36V)
2. This light becomes hot under continuous use. Don't remove or touch the casing for at least 30 minutes after turning the lamp off.
3. Keep heat-sink clean and exposed to maintain air flow.