



## LED DRIVING LIGHT INSTALLATION INSTRUCTIONS

### Preliminary Steps

1. Read all instructions carefully and study diagrams before installing lights.
2. Check with state and local authorities for laws governing usage and proper mounting of auxiliary lamps.
3. Disconnect ground connection from battery (marked “-“) to avoid accidental short circuits before attempting to connect electrical wires.
4. Route new wires along existing wiring . Tape as necessary to correct slack.
5. When running wires through the firewall, keep them away from moving parts.

### Mounting Lights

1. Drill 10 mm holes for screw placement on the surface where you would like to fix the light.
2. Use the bolt to fasten the lamp, add the locking washer and tighten the bolt.
3. Wiring:

FUNCTION	WIRES COLOR
Ground	Black
Headlight	Red
Position Light (White)	White
Position Light (Orange)	Yellow



## LED DRIVING LIGHT INSTALLATION INSTRUCTIONS


### Warnings

1. Use as intended
2. Use in airy places
3. Do not touch the lamp during operation, immediately after it is turned off, the lamp may get warm
4. Any unauthorized interference with the lamp (associated with its depressurization, interference with the electronic system, etc.) is associated with the loss of warranty
5. The device must be installed and kept out of reach of children

### Technical data:

<b>Power</b>	160W
<b>Voltage</b>	9-36V
<b>Function</b>	Driving Beam & Position Lights
<b>Position Lights</b>	Orange and White
<b>Lumen</b>	12500Lm (Raw), 8000 Lm (Effective)
<b>Approvals</b>	ECE R10, R148, R149
<b>Waterproof</b>	IP67
<b>Operating temperature</b>	(-40°C to +60°C)

Housing: Die-cast Aluminum Housing, Lens: PC

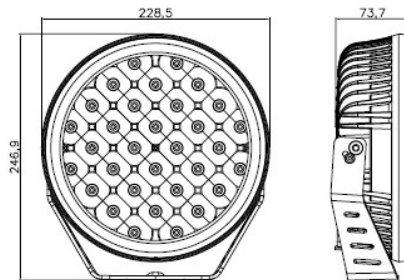

[www.skyledproducts.com](http://www.skyledproducts.com)

SKYLED COMA 9X 13300055